

REMINGTON®

Ultimate Performance Hair Clipper

HC9700

Use and Care Guide



Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits:
 Proof of Ownership • Product Protection • Product Registration • Special Offers
 Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following; read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

- Do not use in area that can be dropped into a sink or bath.
- Make sure the charging stand, power adapter, and cord do not get wet. Do not plug or unplug the appliance with wet hands.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or persons with special needs.
- Use this appliance only for its intended use as described in this manual.
- Do not use attachments not recommended by the manufacturer.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.

- Make sure the cord is disconnected from the clipper while storing this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not use this appliance with a damaged or broken cutter unit, as injury may occur. Always make sure blades are aligned properly.
- Always attach plug to appliance and then the adapter to the outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the dipper for storage.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Dispose of batteries properly. Do not incinerate. Batteries may explode if overheated. Do not wrap in metal or aluminum foil. Wrap in newspaper before discarding. It is suggested that you contact local battery redemption site(s) in your area.

SAVE THESE INSTRUCTIONS

Product Features

Remington® hair clippers provide a quick and easy way to create professional-looking haircuts. Developed to combine professional grade blades with premium guide combs, this hair clipper enables you to achieve customized, modern looks and traditional hairstyles. To help you create those styles, and to extend the life of your hair clipper, please read all instructions before using.



- 1 On/off switch
- 2 Taper lever
- 3 Blade set
- 4 Left and right ear guide combs
- 5 9 guide combs (1.5mm–25mm)
- 6 Charging stand
- 7 Charge/low battery indicator
- 8 Oil bottle
- 9 Adaptor (not shown)
- 10 Hex wrench (not shown)
- 11 Angled cleaning brush (not shown)
- 12 Blade release button (not shown)

Charging Your Appliance

Note: Charge your appliance for a full 4 hours before using for the first time.

- Please refer to the charge times shown in this book.
- Ensure the product is switched off.
- The adaptor automatically adjusts to a main voltage between 100V and 240V.
- Connect the product to the adaptor and then to the power outlet.

CHARGING VIA CHARGING STAND

- Connect the adaptor to the charge stand and then to the power outlet.
- Place the charge stand on a flat surface.
- To charge the clipper without the charge stand connect the adaptor to the power port at the base of the product and then to the power outlet.

CHARGE LEVEL INDICATORS DURING CHARGING

Charge Level	Indicator
Charging	Red LED will blink slowly
Low Battery	Red LED will blink fast
Fully Charged	Red LED will stay solid (when plugged in)

- Run time from fully charged is 150 mins.
- Charge time from empty is 4 hours.

Note: This product can be used corded or cordless.

Note: To preserve the life of your batteries, let them run out every 6 months then fully charge.

Note: When the battery is becoming depleted, the low battery indicator will flash.

QUICK CHARGE FUNCTION (TYPICAL EXPECTED RUN TIME)

Charge	Run Time
5 minutes	2.5 minutes
10 minutes	5 minutes
30 minutes	15 minutes
60 minutes	30 minutes
120 minutes	60 minutes

How to Use

- For corded use connect the product to the adaptor, then to the power outlet.
- Extended corded only use will result in a reduction of battery life.
- Cordless use – when the product is switched on and fully charged it can be used in cordless mode for up to 150 minutes.
- Switch the product on by sliding up the on/off switch.

BEFORE STARTING THE CUT

- Inspect the clipper making sure that it is free from hair and dirt.
- Seat the person so that their head is approximately at your eye level.
- Before cutting, always comb the hair so it is tangle free and dry.
- 1mm length is achieved without any combs. Holding the blades perpendicular to the skin will trim to 0.5mm at the lowest taper lever setting.

Guide Comb	Grade/Cut Length
0	#0, 1.5mm
1	#1, 3mm
2	#2, 6mm
3	#3, 9mm
4	#4, 12mm
5	#5, 16mm
6	#6, 19mm
7	#7, 22mm
8	#8, 25mm

TAPER LEVER

- The taper lever settings can be seen on the table below.
- Setting one gives you the length indicated on the fixed comb you are using.
- Using the taper lever will increase this length correspondingly.

Setting	Cut length
1	1.0mm
2	1.15mm
3	1.3mm
4	1.45mm
5	1.6mm

TO ATTACH AND REMOVE A COMB

- Make sure the blade is locked into place.
- Install the desired comb attachment on the blade, it will latch into place.
- To remove, pull the removal tab first to release the latch and pull away.

INSTRUCTIONS FOR CUTTING HAIR

- For even cutting, allow the comb attachment/blade to cut its way through the hair. Do not force it through quickly. If you are cutting for the first time, start with the maximum comb attachment.

STEP 1 – Nape of the neck

- Attach the 3mm or 6mm guide comb.
- Hold the clipper with the blade teeth pointing upwards. Begin starting at the centre of the head at the base of the neck.
- Slowly lift the clipper, working upwards and outwards through the hair, trimming just a little at a time.

STEP 2 – Back of the head

- With the 12mm or 19mm guide comb on the clipper, cut the hair at the back of the head.

STEP 3 – Side of the head

- With the 3mm or 6mm guide comb on the clipper, trim sideburns.
- Then change to the longer 9mm guide comb and continue to cut the top of the head.

How to Use

STEP 4 – Top of the head

- Use the longer length guide comb 22mm or 25mm on the clipper to cut hair on top of the head against the direction in which the hair normally grows.
- Always work from the back of the head.

STEP 5 – The finishing touches

- Use the clipper without a guide comb for close trimming around the base and sides of the neck.
- To produce a clean straight line at the sideburns, reverse the hair clipper. Place the reversed clipper at right angles to the head, tips of the blades lightly touching the skin and then work downwards.

SHORT TAPERED STYLES – “Flat Tops” and Short Cuts

- Starting with the longest guide comb attached (25mm), cut from the back of the neck to the crown. Hold the guide comb flat against the head and slowly move the clipper through the hair.
- Use the same procedure from the lower side to the upper side of the head. Then cut the hair against the direction in which it grows and level with the sides.
- To give a “flat top” look, the hair on top of the head must be cut over the top of a flat comb.
- Use a closer guide comb to taper the hair down to the neckline as desired.

Cleaning and Maintenance

- To ensure long lasting performance of the clipper, clean the blades and unit regularly.
- Ensure the appliance is switched off and unplugged from the power outlet.
- Do not use harsh or corrosive cleaners on the unit or blades.
- Cleaning should be done with a soft brush.
- After each use - Brush the accumulated hair from the blades.
- Ensure the appliance is switched off and unplugged from the power outlet.
- To clean the unit, wipe with a damp cloth and dry immediately.

Note: Suitable for cleaning under water.

WASHABLE CLEANING

- The clipper is fully washable and can be easily cleaned under a running tap.
- Press the blade release point to slide out the blade. Then the blade set can easily be cleaned under the tap.
- Once the blades are cleaned and dry, place the blade set on top of the clipper and push it towards the hair clipper until it snaps into place.
- We recommend that you oil the blades regularly. Add a few drops on all gliding surfaces, the cutting area and back pads of the blades.

Note: A hex wrench is provided to enable you to take the blade apart for deep cleansing.

EVERY SIX MONTHS

- The blade assembly can be taken apart for deep cleansing.
- Use the provided hex wrench to remove the two blade fasteners.
- The blade will come apart in 3 pieces, that can be wiped and cleaned.

Spare blade replacement model: Blade SP-HC9700

BLADES

- It is recommended to oil the blades after every use.
- Place 2 to 3 drops of lubricating oil on the moving blade and turn on the clipper. The oil should distribute on its own. Wipe off any excess oil.

Troubleshooting

Clipper does not work when turned on:

- Clipper must be charged for a full 4 hours.

Clipper cutters do not move:

- The cutting unit may be dirty and clogged. Clean the unit as directed in Cleaning and Maintaining section.
- Always clean the blade and clipper before storing.
- Always place the blade protection guard back on the clipper blades before storing.

Clipper does not hold charge:

- Fully discharge battery by running clipper until it stops, then follow recharging instructions (see section on charging your hair clipper).

U.S. and Canada residents: To order accessories call 800-392-6544, visit your local retailer, or visit RemingtonProducts.com.

Product Disposal

When your rechargeable clipper reaches the end of its useful life, the batteries must be removed and recycled or disposed of properly in accordance with your local and state requirements.

The following should be followed for battery removal:

- Ensure device is unplugged from any electrical outlet and discharged of all power.
- The battery is not serviceable.
- The battery must be removed from the appliance before it is scrapped.
- Push out the blade assembly from the unit.
- Using the hex wrench remove 4 screws from the unit.
- Using a small screwdriver, pry off the top housing.
- Remove the switch assembly.
- Using a small screwdriver remove 6 screws from the top inner housing.
- Open the top inner housing to expose the printed circuit board.
- Cut the wires which connect the motor to the circuit board and expose the battery.
- Cut the wire tabs which connect the battery to the circuit board and remove the battery.

Note: This clipper is not intended for professional use.

Warranty

Limited Five Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for the life of the product. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will replace it free of charge. Return your product with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S. or Canada.

Warranty excludes:

- The blades and storage case are not included in the limited five year warranty.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

No responsibility, obligation, or liability is assumed for the installation or maintenance of this product.

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO THE LIFE OF THE PRODUCT.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

Remington Guarantees Satisfaction After 60 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® branded product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. or Canada.

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington® branded product:
 - a. The Remington® product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4–6 weeks to receive your refund by check.

Questions or comments: Call 800-736-4648 in the U.S. or Canada or visit RemingtonProducts.com.

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562
Dist. by: Spectrum Brands Canada Inc.
255 Longside Drive, Unit 101
Mississauga, ON L5W 1L8

® Registered Trademark of Spectrum Brands, Inc.

© 2017 Spectrum Brands, Inc. 5/17 17582-00

Made in China.

T22-0005042-A

Contains a listed adaptor.