

HF9000, HF9100



Use and Care Guide

Register Your New Product Today!

By registering your new Remington® product, you will receive these important benefits:
 Proof of Ownership • Product Protection • Product Registration • Special Offers
 Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following. **Read all instructions before using this shaver.**

DANGER

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS:

- For connection of the power supply unit to a power source not in the U.S.A. and Canada, use an attachment plug adaptor of the proper configuration for the power outlet.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Unplug this appliance before cleaning.
- Detach the appliance from the power supply cord before cleaning.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children, or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug or if it is not working properly, if it has been dropped or damaged.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any of the appliance's openings.

- Household use only.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always attach the plug to the appliance, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
- Always pull on cord plug to unplug from wall socket. Never pull on electric cord.
- Do not plug or unplug this appliance when your hands are wet.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Detach removable power cords from appliance for storage.
- Do not use this appliance with a damaged or broken head or cutters, as facial injury may occur.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.
- Shavers, including the trimmer, are for use on facial hair only. They should not be used for shaving the hair on your head or any other part of your body.

SAVE THESE INSTRUCTIONS

Product Features



SHAVER PARTS

- | | |
|-----------------------------------------------------------|--------------------------------------------|
| 1. Head Guard | 7. Detail trimmer release button |
| 2. Two Flexing foils and Comfort Hybrid Intercept Trimmer | 8. LED Low/Charging Indicator |
| 3. Foil Assembly Head | 9. Foil assembly head release button |
| 4. Micro USB Charging Port | 10. Micro USB charging adaptor (not shown) |
| 5. Pop-up Detail Trimmer | 11. Travel Pouch (not shown) |
| 6. On/Off Switch | |

Product may vary slightly from what is illustrated.

Product Features

Feature	HF9000, HF9100
Power System	Lithium Rechargeable
Full Charge Time	2 hours
Cordless Shave Time	60 minutes
Quick Charge	Yes
Indicators	Charging/Low/Full Battery
Voltage Type	Worldwide
Replacement Part	SPF-HF90
Washable	Yes



This shaver was developed to be used with your favorite shave cream or gel, for an even smoother glide.

Charging

Before using, read the important safety instructions at the beginning of the manual.

1. Insert the Micro USB end of the charging adaptor into the charging port on the bottom of the shaver.
2. Connect the plug end of the charging adaptor into an outlet.
3. Charge shaver to a full charge before its first use.
4. Use shaver until recharge is required.

CAUTION!


- Make sure the shaver and your hands are dry when charging the shaver.
- Always charge the shaver in a cool, dry place.

LED Charging Indicators:

Charging: LED flashing (0.75 secs On, 0.75 secs Off)
 Full: LED On for 5 min then Off
 Low: LED rapid flashing (0.2 secs On, 0.2 secs Off)

Shaver can be used with or without the USB charging adapter attached.

Shaving

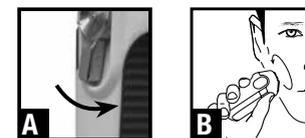

1. Rotate On/Off Switch to turn on. (A)
2. Shave face and neck using short, circular strokes. (B)
3. Shaver can be used on a dry face or with shave cream or gel.

Shaving Tips With Gel or Foam

NOTE: In order to ensure optimal performance, thoroughly rinse the shaver head under water during and after shaving.

1. Apply water to face and neck area.
2. Apply shave gel or foam to applicable shaving area.
3. Rinse shaver head under water.
4. Shave face and neck using short, circular strokes.
5. Throughout the shave, regularly rinse shaver head under water to avoid residue build up.
6. When finished shaving, rinse face.
7. Thoroughly rinse shaver head of all gel or foam.
8. Follow cleaning and care instructions.

Shaving Tips (Dry)

- Ensure your skin is free of oils.
- Wait at least 15 minutes after getting up before shaving, to ensure your face is free of puffiness that may be present from sleeping.
- Always hold the shaver at a right angle to the skin so that the screens are touching the skin with equal pressure.
- Stretch skin with the free hand so hairs stand upright, making it easier for them to enter the cutting chamber.
- Use moderate to slow, circular stroking movement.
- The use of short, circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- Do not press hard against the skin to avoid skin irritation and/or damage to the shaver head.

We recommend that you use your new shaver daily for up to four weeks to allow time for your hair and skin to become accustomed to the new shaving system.

Cleaning and Care



The shaver is a washable appliance. It may be rinsed under water.

NOTE: When cleaning your shaver, make sure the shaver is turned off and disconnected from the power cord.

CAUTION!

- To clean the external surfaces of the shaver, use a damp cloth. Do not use strong detergents or other chemicals.
- To dry, wipe the surface of the shaver with a dry towel. Do not use a hair dryer or heater to dry the shaver.

Note: Lubricate cutters after rinsing.

Cleaning Your Shaver

Note: We recommend following these steps after each use.

1. Remove the foil assembly head by pressing the release button on the side of the shaver and lifting the foil assembly upwards. (C)
2. Tap out excess hair shavings.
3. Rinse the head of the assembly under running water. (D)
4. Replace the head assembly by placing the assembly on top of the shaver body, press down and click into place.

Note: Lubricate teeth of trimmer with oil every six months.



Product Disposal

When your rechargeable shaver reaches the end of its useful life, the LiFePO₄ batteries must be removed from the shaver and be recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the shaver with the batteries.

CAUTION! Do not put in fire or mutilate your batteries when disposing as they may burst and release toxic materials. Do not short circuit as it may cause burns. Dispose of properly in accordance with your local and state requirements.

To Remove the Rechargeable Battery:

1. Unplug the shaver
2. Run the shaver until the motor stops.
3. Remove the foil assembly head and pull off the cutters.
4. Using a Phillips screwdriver, remove 4 screws and pry out the top piece of plastic.
6. Remove the front panel with the Remington logo to expose two screws. Remove them.
7. Pry off the front panel held by three internal plastic snaps.
8. Remove the four exposed screws.
9. Pry out the plastic bracket. A release button and spring will come out at the same time.
10. Remove the two screws within the shaver body that hold the inner housing to the outer housing. One screw is to the bottom and the other screw is to one side.
11. Loosen the large screw holding the power switch to the housing; there is no need to remove this screw entirely.
12. Pry apart the housing from the power switch to separate the two components held together by the metal pin.
13. Pull the inner housing out of the outer housing.
14. Remove the two screws holding together the front and back panel of the inner housing.
15. Pry apart the front and back panel of the inner housing by spreading the two plastic snaps to either side.
16. Remove the two screws holding the circuit board to the housing.
17. Cut the wires connecting the circuit board to the charge port, motor, and power switch.
18. Pull out the circuit board and battery assembly and cut the metal tabs connecting the battery to the board.
19. Pull out the battery: rechargeable Li-ion cell. Dispose of safely.

Product Registration

By registering your new Remington® product you will receive these important benefits:

- Proof of ownership
- Product protection
- Product registration
- Special offers

Register online at: RemingtonProducts.com

How To Order Shaver Accessories

Please refer to the shaver comparison and features chart near the front of this manual that lists the correct replacement part number for your shaver.

It is very important to replace your head and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 6 months. Here are some signs of head and cutter wear, indicating that replacement is needed:

- **Irritation:** As the heads get excessively worn you may experience some skin irritation. This would be especially noticeable when you apply moisturizing lotion.
- **Pulling:** When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace your heads and cutters.

Maintain your shaver's peak performance! Keep Your Shaver Performing Like New!

- Because your satisfaction is important to us, we want to make it simple for you to keep your new shaver performing at its peak.
- For the best possible shave, it is necessary to replace the heads and cutters on your shaver every 6 months?
- Remington makes this easy!

Two Easy Ways to Order!

1. Call! U.S. residents call 1-800-392-6544
2. Order Online at RemingtonProducts.com



Warranty

Limited Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Remington Returns Center, 507 Stokely Dr., P.O. Box 1, Deforest, WI 53532. For more information call 800-736-4648 in the U.S.

Warranty excludes:

- Foils and cutters

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Performance Guarantee

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S.

Remington Guarantees Satisfaction After 30 Days!

Remington® 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® branded product, you are not completely satisfied and would like a refund, return it with the original dated sales receipt directly to Remington and receive a full refund.** For questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. *Applies to U.S. customers' returns only.

**Terms and conditions apply.

Terms and Conditions

1. Refund will be in the form of a check issued in U.S. Dollars and will be provided only if all Terms and Conditions are met.
2. The following items must be returned to Remington and postmarked no later than 60 days after purchase of the Remington branded Men's Shave and Groom product:
 - a. The Remington product;
 - b. The original sales receipt indicating price and date purchased; and
 - c. The completed 60-day money back guarantee form located at RemingtonProducts.com/60day.
3. In addition, Remington, in its discretion, must determine that the returned product was used in accordance with the instruction booklet (included with the product at the time of purchase).
4. Returns should be mailed prepaid (no collect returns accepted) to:
Remington 60-Day MBG
507 Stokely Drive, Box 1
DeForest, WI 53532
5. Refund does not include postage costs for the return of the product, but will include applicable taxes paid by customer, if any.
6. No responsibility will be accepted for late, lost, stolen, misdirected or damaged product.
7. Please allow 4-6 weeks to receive your refund by check.

Questions or comments: Call 800-736-4648 in the U.S. Or visit RemingtonProducts.com

Dist. by: Spectrum Brands, Inc., Middleton, WI 53562
© Registered Trademark of Spectrum Brands, Inc.

© 2017 Spectrum Brands, Inc. 8/17 18492-00

Made in China

T22-700009-A