

REMINGTON®

EST. NEW YORK 1937

 
 
 
 
 
 
 


**Omniblade
HG1000**

 remington-europe.com

Register online for an EXTRA year guarantee

Visit uk.remington-europe.com/product-registration You must register within 28 days of purchase.

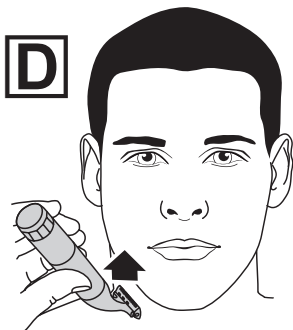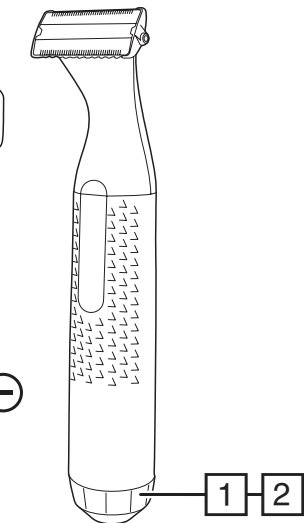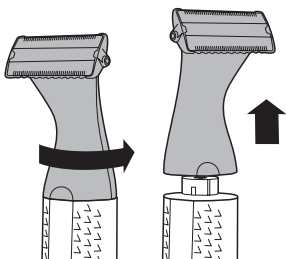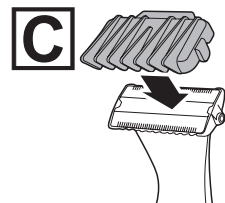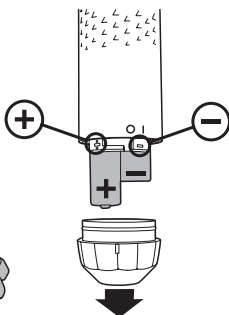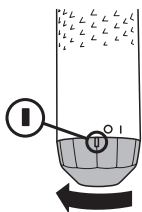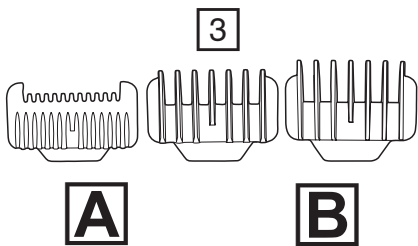

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.

 Suitable for use in a bath or shower.

- Do not use attachments other than those we supply.
- Do not use the appliance if it is damaged or malfunctions.
- This appliance is not intended for commercial or salon use.

BATTERY SAFETY

- Used batteries must be removed from the appliance and disposed of at an appropriate official recycling/collection point.
- Do not try to charge non-rechargeable batteries.
- Do not put in fire or mutilate your batteries when disposing as they may burst and release toxic materials.
- Remove batteries if the unit is not in use for long periods.
- Different types of batteries or new and used batteries are not to be mixed.
- Do not short circuit the battery contacts.

PARTS

- | | |
|-------------------------------|---------------------|
| 1. On/off switch | Not shown: |
| 2. Battery compartment cover | • Travel pouch |
| 3. Stubble combs (1, 3, 5 mm) | • 2 x AAA batteries |

GETTING STARTED

BATTERIES

- Your shaver requires 2 'AAA' alkaline batteries (first set included).
1. Rotate the on-off switch/battery compartment cover counterclockwise to the position just to the right of the **O** marking (Fig A) to unlock the battery compartment.
 2. Pull the battery compartment cover downwards (Fig. B).
 3. Insert batteries so that the (+) and (-) marks on the batteries face the same marks in the battery compartment.
 4. Replace the on-off switch/battery compartment cover and twist it to the **O** position to secure it.

INSTRUCTIONS FOR USE

Switch the product on by rotating the on-off switch/battery compartment cover clockwise to the **I** mark.

Always comb your beard or moustache with a fine comb before you start trimming.

FITTING AND REMOVING STUBBLE GUIDE COMBS (FIG. C)

To Fit

- Hook the front of the comb over the blade.
- Press the back of the comb down until it clicks into place.

To Remove

- Lift the tab on the back of the comb upwards until it comes free from the blade.

TO TRIM THE BEARD

1. Select your desired trimming length comb. If you are trimming for the first time start with the maximum trimming length setting.
2. Turn the unit on.
3. Place the flat top of the fixed comb against the skin.
4. Slowly slide through the hair. Repeat from different directions as necessary.
5. If hair builds up in the trimmer comb during the trimming process, switch the unit off, pull off the comb and brush the hair off.

TO GET A SHAVEN LOOK

To trim any length of beard or stubble hair for a clean, shaven look then follow the above steps without a comb attached to the blade head.

Place the flat top of the blade against the skin and slowly slide through the hair against the direction of growth.

Shave in an upwards direction when shaving under the chin (Fig. D).

TRIMMING AND EDGING

1. Hold the device with the back side of the blade facing you with no combs attached.
2. Start with the blades resting lightly against your skin, use motions towards edge of beard line to trim to desired locations in facial area.
3. Shape as desired.

TRIMMING WITH SHAVING GEL

Follow the same instructions as dry shaving if using shaving gel.

Caution: After use with shaving gel, please rinse the blade under warm water to clean away any excess gel and debris.

CARE FOR YOUR GROOMER

To ensure long lasting performance of the groomer, clean after each use.

The easiest and most hygienic way to clean the groomer is by detaching the head from the groomer body and rinsing the head with warm water.

The head can be removed from the body for cleaning by rotating it as shown in Fig D and lifting it off the body.

To keep the unit in optimal condition we recommend re-oiling the blades after cleaning. Place a few drops of cutter or sewing machine oil onto the blades. Wipe off excess oil.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/ collection point.

SERVICE AND GUARANTEE



Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under

any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: <https://uk.remington-europe.com/product-registration>

Consumables are guaranteed only for their recommended lifecycle. Replacement/spare parts* are excluded and are only covered by a 1 year warranty.

*Examples include, but are not limited to, adaptors, haircare attachments, grooming accessories, etc.

SERVICE CENTRE

UNITED KINGDOM


 0800 212 438 (free call mainland UK)

Spectrum Brands (UK) Ltd
Fir Street, Failsworth, Manchester
M35 0HS, UK

www.remington.co.uk

productsupport@Remington.co.uk

IRELAND

 142 951 40

Remington Consumer Products,
Unit B12, Ballymount Corporate Park,
Ballymount, Dublin 12

<https://ie.remington-europe.com>

productsupport@Remington.co.uk

Ref. No. HG1000

Type No. HG01A

20/UK/ HG1000 T22-7001379 Version 09 /20

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

remington-europe.com

© 2020 Spectrum Brands, Inc.